 
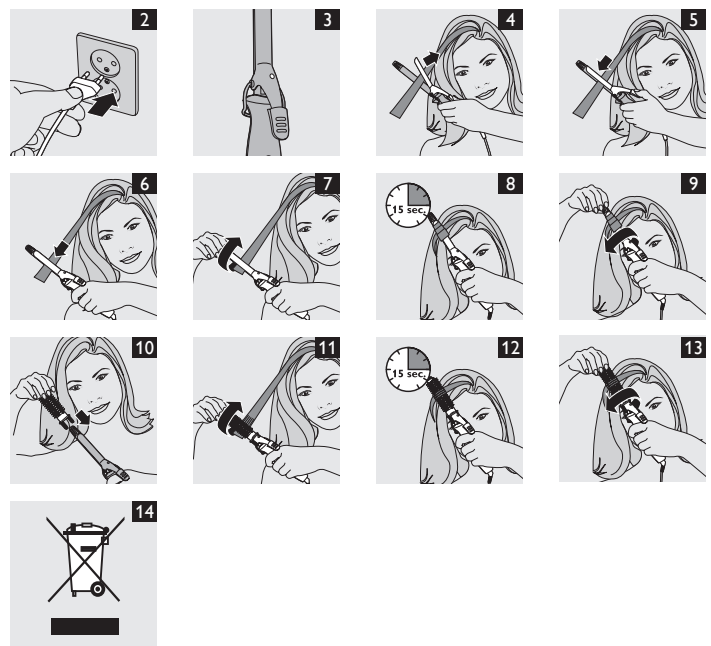 
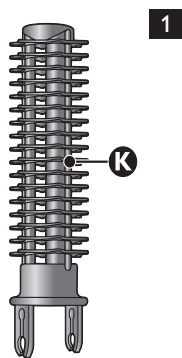 


HP4658/I7 SalonCurl Essential

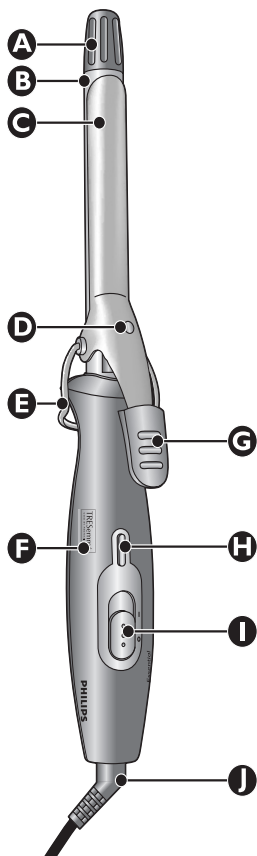

Introduction

Your new Philips TRESemmé SalonCurl Essential has been specially designed to make hairstyling easy and to give you beautiful styling results. The EHD (Even Heat Distribution) Ceramic Tourmaline Technology provides optimal heat distribution for long-lasting, professional results. The Ceramic Tourmaline coating enables gentle gliding without hair pull, giving you smooth and shiny curls and waves.

General description (Fig. 1)

- A** Cool tip
- B** Barrel with ceramic tourmaline coating
- C** Clip
- D** Ready dot
- E** Stand
- F** Handle
- G** Lever with thumbrest
- H** Power-on light
- I** On/off slide
- J** Swivel cord
- K** Slide-on brush

Important

Read this user manual carefully before you use the appliance and save it for future reference.

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Check the condition of the mains cord regularly. Do not use the appliance if the plug, the cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not wind the mains cord round the appliance.
- Keep this appliance away from water. Do not use it near or over water contained in baths, washbasins, sinks etc. When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk, even when the appliance is switched off.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- The barrel and the clip of this appliance become hot during use. Prevent contact with the skin.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Prevent the mains cord from coming into contact with the hot parts of the appliance.
- Only use the appliance on dry hair.
- Always unplug the appliance after use.
- Wait until the appliance has cooled down before you store it.
- Keep the barrel clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- Always return the appliance to a service centre authorised by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.
- The barrel has a ceramic tourmaline coating. This coating slowly wears away over time. This does not affect the performance of the appliance.
- Keep the appliance away from flammable objects and materials when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Never leave the appliance unattended when it is plugged in.
- If the appliance is used on colour-treated hair, the barrel may stain.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use

Washing

The straightener gives the best results on well-washed hair. We advise you to follow the washing tips below:

- 1** Wet your hair thoroughly for 30-60 seconds.
- 2** Pour some shampoo into the palm of your hand. Spread it between your hands and distribute it evenly through the hair.
- 3** Gently massage your hair and scalp. Do not rough up the hair or pull up long hair onto the scalp, as this may cause tangles.
- 4** Massage your scalp with your fingertips. This stimulates blood circulation and is gentler to the hair cuticles.
- 5** Rinse your hair thoroughly, as poor rinsing can result in dull hair. Finish with a cold rinse for extra shine.

Using the appliance

Curling irons are powerful styling tools and must always be used with care.

Styling with the curling iron

- 1** Put the mains plug in the wall socket (Fig. 2).
- 2** Set the on/off slide to 'I' to switch on the appliance (Fig. 3).
 - ▶ The green power-on light goes on. It stays on as long as the on/off slide is set to 'I'.
 - ▶ After approximately 3 minutes, the dot on the barrel changes colour (becomes lighter). The appliance is now ready for use.
- 3** Take a lock of hair. Press the lever to open the clip and place the lock between the barrel and the clip (Fig. 4).

The thinner the lock of hair, the tighter the curl. In this way, the full length of the lock comes in contact with the heated barrel.

- 4** Release the lever (Fig. 5).
- 5** Slide the barrel to the end of the lock (Fig. 6).
- 6** Wind the lock round the barrel (Fig. 7).
Make sure you wind the end of the lock in the required direction.
- 7** Keep the curling iron in your hair for approximately 15 seconds (Fig. 8).
- 8** Unwind the lock of hair until you can press the lever to open the clip (Fig. 9).

You can comb the curls with your fingers to add volume.

Styling with the slide-on brush

You can use the slide-on brush to create waves and to add volume to your hair.

- 1** Slide the brush onto the barrel of the appliance (Fig. 10).
- Be careful. If you have just used the curling iron, the barrel is still hot.**
- 2** Put the mains plug in the wall socket (Fig. 2).
 - 3** Set the on/off slide to 'I' to switch on the appliance (Fig. 3).
 - ▶ The green power-on light goes on. It stays on as long as the on/off slide is set to 'I'.
 - ▶ After approximately 3 minutes, the dot on the barrel changes colour (becomes lighter). The appliance is now ready for use.
 - 4** Start styling when the colour of the dot has become light.

Prevent the brush from getting tangled in the hair in the following way:

- Do not make the locks too thick.
- Do not wind a lock of hair more than twice round the brush.

- When you unwind a lock of hair, make sure that you hold the brush away from the underlying hair.

- 5** Take a lock of hair and wind it round the brush. Make sure you wind the end of the lock in the required direction (Fig. 11).
- 6** Keep the brush in your hair for approximately 15 seconds (Fig. 12).
- 7** Unwind the lock to remove the brush from the hair (Fig. 13).

Cleaning

Always switch off the appliance, unplug it, put it in a safe place and let it cool down.

Never rinse the appliance with water.

- 1** Clean the appliance with a small brush or a dry cloth.
- 2** Remove the slide-on brush from the appliance before you clean it.
- 3** Clean the slide-on brush with a moist cloth.
- 4** Dry the slide-on brush before you use or store it.

Storage

Always switch off the appliance, unplug it and let it cool down before you store it.

Do not wind the mains cord round the appliance.

- 1** Store the appliance in a safe and dry place.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 14).

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Troubleshooting

If problems should arise with your curler and you cannot solve them with the information below, please contact the nearest Philips service centre or the Philips Customer Care Centre in your country.

Problem

- ▶ The appliance does not work at all.
 - 1** Perhaps there is a power failure or the socket is not live. Check if the power supply works. If it does, plug in another appliance to check whether the socket is live.
 - 2** Check if the mains cord of the appliance is damaged. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.